



TEL 305.625.2451

ATLAS METAL

1135 N.W. 159th DRIVE, MIAMI, FLORIDA 33169

TOLL FREE 800.762.7565

FAX 305.623.0475

WCPT-3 and WCPT-4

Service and Installation Manual

Please read this manual completely before attempting to install or operate this equipment! Notify carrier of damage! Inspect all components immediately. See page 1.



Drop-in Display Cases



Effective Date: 10/2025
IMPORTANT INFORMATION
READ BEFORE USE

CONTENT

RECEIVING & INSPECTING EQUIPMENT.....	1
SERIAL AND MODEL# LOCATION.....	1
SPECIFICATIONS FEATURES AND ACCESSORIES.....	2
ELECTRICAL CHARACTERISTICS AND CUT-OUT REQUIREMENTS.....	3
THERMOSTAT SETTINGS, ELECTRICAL & REFRIGERATION CHART.....	4
INSTALLATION, OPERATION AND S/S MAINTENANCE, NSF REQUIREMENTS.....	5-7
SLIDING DOOR MAINTENANCE, SLIDING DOOR REMOVAL & REINSTALL.....	8
SHELF INSTALLATION, IMPORTANT OPERATION & PRESSURE CONTROL SETTINGS.....	9
REMOTE INSTALLATION.....	10
PARTS LIST.....	11
TROUBLE SHOOTING GUIDE.....	12
ELECTRICAL SCHEMATICS.....	13
LIMITED WARRANTY.....	14
WARRANTY INFORMATION.....	15-16

RECEIVING AND INSPECTING THE EQUIPMENT

1. VISUALLY INSPECT THE SHIPPING CRATE. DAMAGE SHOULD BE NOTED AND REPORTED TO THE DELIVERING CARRIER.
2. IF DAMAGED, OPEN AND INSPECT CONTENTS WITH CARRIER.
3. IF CRATE IS NOT DAMAGED AND THERE IS CONCELED DAMAGE TO THE EQUIPMENT, NOTIFY THE CARRIER. NOTIFICATIONS MUST BE MADE VERBALLY AND IN WRITING.
4. REQUEST AN INPECTION BY THE SHIPPING COMPANY FOR THE DAMAGED EQUIPMENT WITHING 10 DAYS FROM RECIEPT OF THE EQUIPMENT.
5. FREIGHT CARRIERS CAN SUPPLY THE NECESSARY FORMS ON REQUEST.
6. SAVE ALL CRATING MATERIALS UNTIL INSPECTION HAS BEEN MADE OR WAIVED.

SERIAL NUMBER LOCATION

THE SERIAL AND MODEL# CAN BE FOUND ON THE OPERATORS CONTROL PANEL. WHEN CALLING ATLAS FOR PARTS AND SERVICE ALWAYS HAVE THIS INFORMATION AVAILABLE.

SERIAL# _____
MODEL# _____
INSTALLATION DATE# _____



ATLAS METAL

1135 N.W. 159th DRIVE, MIAMI, FLORIDA 33169

TEL 305.625.2451

TOLL FREE 800.762.7565

FAX 305.623.0475

WWW.ATLASFOODSERV.COM

SALES@ATLASFOODSERV.COM

Project: _____
Item No.: _____
Quantity: _____

DROP-IN SERVING EQUIPMENT



DISPLAY CASE

**Refrigerated,
Pass-Through
Self-Contained**

- WCPT-3
- WCPT-4

SPECIFICATIONS

TOP: Constructed of 18 gauge, type 304 stainless steel, die stamped with a raised perimeter bead. The top is solid, full-length, to support the refrigerated display case. There shall be a solid vinyl gasket under the beaded edge to form a seal to the counter top, thus preventing seepage or marring of the counter top.

DISPLAY CASE: Double wall constructed of type 304 stainless steel - 20 gauge, both interior and exterior, and filled with 2" of foamed-in-place polyurethane insulation. Customer's side and operator's side are provided with a set of two (2) sliding, self-closing, thermo-pane, insulated glass doors. The doors are removable for ease of cleaning. The display case is provided with two (2) plastic coated wire shelves, adjustable on 1" increments, and two (2) sets of fluorescent light fixtures mounted behind plastic guards which are recessed into the side panels. The light fixtures are provided with a separate on/off switch. An internal thermometer is provided.

REFRIGERATION SYSTEM: The compressor housing shall be fabricated from 14 gauge galvanized and bolted to the base of the unit. A fully self-contained condensing unit is provided with a hermetically sealed compressor and a thermostat control. The system is also provided with a forced air evaporator, for even temperature throughout the display case, which drains into a condensate evaporator, pre-wired in the unit. The system is fully charged with CFC free refrigerant and ready to operate.

NOTE: Proper ventilation must be provided in counter.

ELECTRICAL: The unit will be wired for 15 amps., 120 volt, single phase operation with an on/off thermostat switch and pilot light. A 6' long, 3-wire cord and plug (NEMA 5-15P) will be provided.

Specifications subject to change without notice.

STANDARD FEATURES

- Large, lighted display area with adjustable shelves - it's the ideal merchandiser
- Sliding glass doors on customer's and operator's side, making loading and self-service move quickly
- Forced air evaporator blower system for maximum efficiency in cooling
- Factory applied gasket - makes installation a snap and seals units to the counter top, thus eliminating seepage
- 1-Year Parts & Labor Warranty
- UL Listed

ACCESSORIES

- **5YW** - 5-Year Compressor Warranty
- Door Locking Device (2 required)
- Extra Shelf
- Plastic Laminate Trim
- Sliding Doors with Reflective Tempered Vision Panel (bronze or gray)
- Solid (1) piece Tempered Reflective Vision Panel (bronze or gray)
- Solid Stainless Steel Back
- **RS** - Remote on/off switch for counter mounting
- **RDVE** - Rear Drain Valve Extension
- * **220 Volt - 50 Cycle** Compressor

*Please see Operation & Installation Manual for ALL operation and maintenance details.




* Units with these accessories are not currently UL listed.

*****IMPORTANT*****

THE WCPT MAY NOT WORK PROPERLY
WITHOUT SUFFICIENT AIRFLOW AS DROP-IN
UNIT, A GRILL AND LOUVERS IS REQUIRED

WCPT-3 - REQUIRED (2) 18" X 18" LOUVERS
ON END PANELS AND (1) 26" X 4-1/2" APRON
CUTOUT FOR A GRILL

WCPT-4 - REQUIRED (2) 18 X 18 LOUVERS ON
END PANELS AND (1) 39-3/4" X 4-1/2" APRON
CUTOUT FOR A GRILL

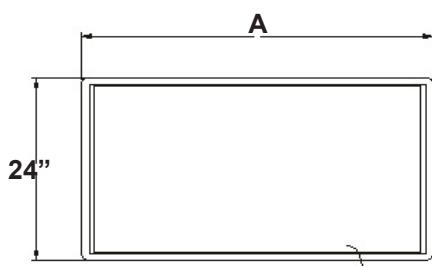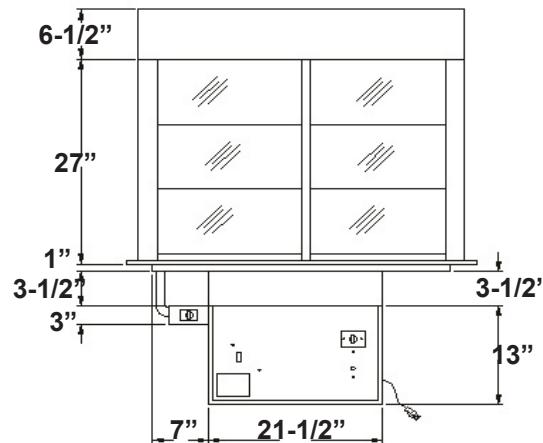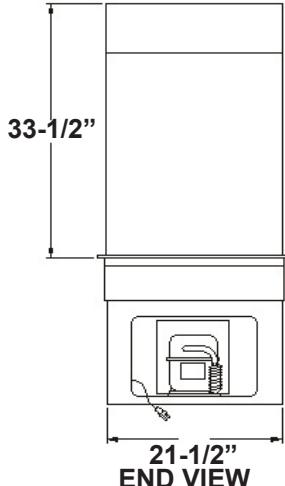**PLAN VIEW****ELEVATION****END VIEW**

MODEL	"A"	ELECTRICAL CHARACTERISTICS	CUT-OUT REQUIRED (W X L)	SHIP WT. (LBS.)	CUBIC FEET
WCPT-3	43-1/2 (110.5cm)	11.0 amps. - 120V 1/2 HP	22-1/4" X 41-3/4" (56.5 X 106cm)	443 (200.9kg)	12 CU FT.
WCPT-4	57-1/4 (145.4cm)	11.0 amps. - 120V 1/2 HP	22-1/4" X 55-1/2" (56.5 X 141cm)	520 (247.7kg)	16 CU FT.

MODEL	HP	REF.	OZ.	LOW PSIG.	HIGH PSIG.	BTU M10 90A	TEMPERATURE SETTING / DIFFERENTIAL
WCPT-3	1/2	R513A	29	35	175	5260	19 OFF / 16 DIFF (35 ON)
WCPT-4	1/2	R513A	29	35	175	5260	19 OFF / 16 DIFF (35 ON)

REMOTE REFRIGERATION MODEL	LESS COMP. SHIP WT. (LBS.)
WCPTX-2	148 (67.1kg)
WCPTX-3	178 (80.7kg)

NOTE WCPTX
REQUIRED A SOLENOID
PACKAGE AND RS, REMOTE
CONTROL PANEL

REFRIGERATED COLD PAN WITHOUT COMPRESSOR REQUIRED:**COMPRESSORS FOR REMOTE INSTALLATIONS**

SOLENOID PACKAGE, LOOSE: SOLENOID VALVE, SOLENOID COIL & COOPER FITTING

2029-8M7 - 1/2 HP for WCPTX-2, & 3

SOLENOID PACKAGE, FACTORY INSTALLED: SOLENOID BOX, SOLENOID VALVE, COIL & COOPER FITTING

****ORDERS NOT FINAL UNTIL REFRIGERANT APPROVED****



WCPT-3 & WCPT-4
ELECTRONIC THERMOSTAT SETTINGS

UNIT		S1(DEG.F)		DIFF.(DEG.F)
WCPT-3		19		16
WCPT-4		19		16

ELECTRICAL & REFRIGERATION CHART

MODEL	VOLTS	AMPS	WATTS	HP	REF	OZ	LOW PSIG	HIGH PSIG	BTU @ M10 90A
WCPT-3	120V	11		1/2	513A	29	35	175	5260
WCPT-4	120V	11		1/2	513A	29	35	175	5260

REFRIGERATED PASS THROUGH DISPLAY CASE

WCPT SERIES

INSTALLATION

Provide the correct counter cut-out opening (see chart below) and drop unit in. The vinyl gasket assures complete seating. A non-toxic silicone sealer required ** between the gasket and counter top (not required).

MODEL	CUT- OUT REQUIREMENTS
WCPT-3	22 1/4" X 41 3/4"
WCPT-4	22 1/4 X 55 1/2"

The unit should be level for draining purposes. When installing units at the counter, it is recommended that the operator side of the counter be completely open for air circulation. When this is not possible, such as in an island counter, it is recommended that two grill openings are provided approximately 18" x 18" of free air for intake and exhaust at the opposite ends of counter. Also, the counter must have an opening of approximately 24" x 14" to access the compressor for maintenance. Then the refrigeration components can be reached by removing six (6) screws from control and rear panels. The unit is supplied with a power cord and NEMA plug. Refer to data plate on compressor housing for the amperage and voltage information. Use a licensed electrician when installing power sources.

For cleaning and maintenance of inside top evaporator coil a qualified refrigeration technician is recommended.

**** For reference, NSF requirement on page 13**

OPERATION

The unit is ready to be operated as soon as it is plugged in and switched on. The unit has been pre-tested for proper operation from 35 to 40 degrees.

MAINTENANCE

NEVER CLEAN PANS WITH A CHLORIDE, ALL-PURPOSE, BLEACH, ACIDIC, VINEGAR BASED PRODUCTS. CHLORIDES OR IMPROPER CLEANING COULD SCAR, MARK AND/OR CORRODE PANS. DO NOT USE STEEL WOOL OR ABRASIVE PRODUCTS TO CLEAN. USE SOAPY WARM WATER, RINSE THOROUGHLY TO REMOVE ALL RESIDUES. FAILURE TO MEET THESE CONDITIONS WILL VOID WARRANTY.



IMPORTANT

Depending on the environment, usage, and maintenance of the unit, periodic review and reapplication of silicon of the wells may be recommended. This is to ensure the unit is adequately sealed to prohibit steam or moisture intrusion from usage.



IMPORTANT!!

NSF REQUIREMENTS

In accordance with NSF-2 & NSF-4 regulations, for added safety in case of water leaks, all carts on legs with skirts must be sealed to the floor to establish proper sanitary operation. This precaution is intended to prevent liquid spillage on adjacent surfaces of the floor or countertop from passing under inaccessible portions of the equipment. To achieve a good sealing between the unit and the top or floor, silicone sealant * must be used. Allow the sealant to cure as per the manufacturer's instructions, usually around 24 hours.

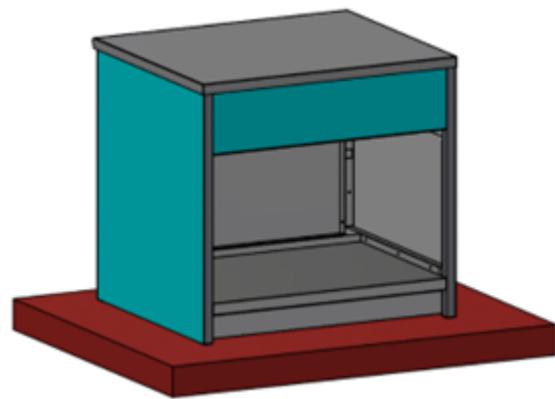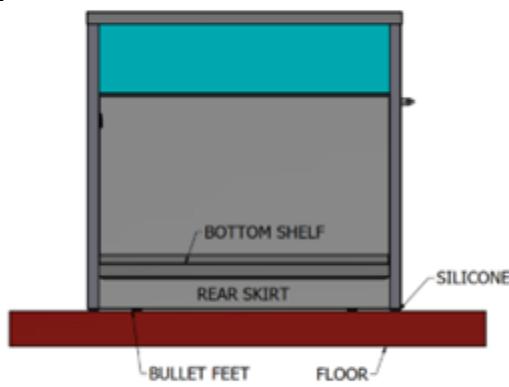


In accordance with NSF-2, NSF-4, NSF-7 & NSF-169 regulations, for added safety in case of water leaks, all drop-in units must be sealed to the countertop to establish proper sanitary operation. To achieve a good sealing between the unit and the top, there shall be a solid vinyl gasket under the beaded edge to prevent water from entering the system. A non-toxic *silicone sealant may be used between the gasket and countertop. This precaution is intended to prevent liquid spillage on adjacent surfaces of the countertop from passing under inaccessible portions of the equipment.

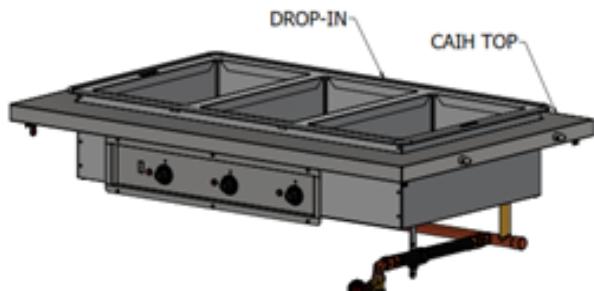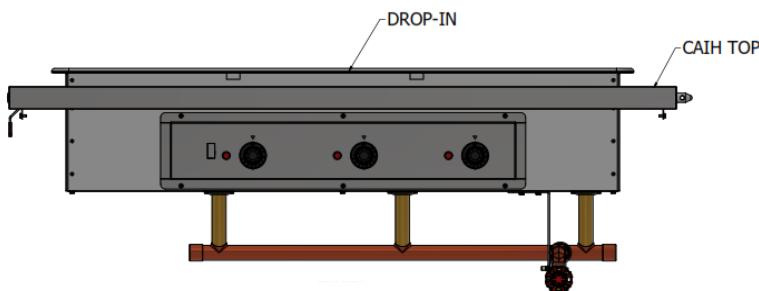

* Sealants shall meet the requirements for the zone of intended use and shall only be used as permitted in NSF / ANSI 51.

SLIDING DOOR MAINTENANCE

ATLAS WCPT DISPLAY CASES ARE PROVIDED WITH EASY REMOVABLE SLIDING DOORS. CLEANING OF THE DOOR GASKETS AND DOOR FRAME TRACKS WITH MILD SOAP AND WATER WILL INSURE SLIDING DOOR ASSEMBLY TO OPERATE PROPERLY.

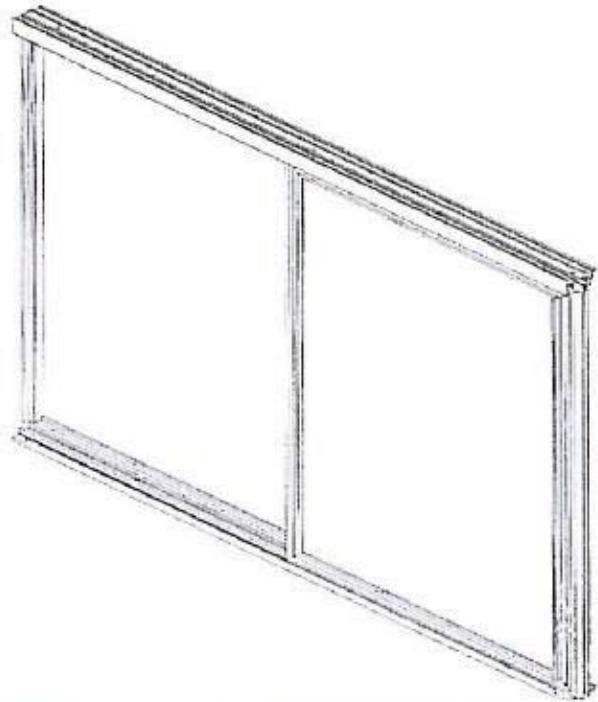

CAUTION - NEVER USE FULL STRENGTH CLEANING PRODUCTS ON GASKETS AS THIS WILL CAUSE THEM TO BECOME BRITTLE AND CRACK VOIDING YOUR WARRANTIES.

SLIDING DOOR REMOVAL AND REINSTALL

SLIDING DOOR REMOVAL

OPEN THE OUTSIDE DOOR HALF WAY. FIRMLY PLACE FINGER ON DOOR RETURN SPRING OPERATOR AT THE TOP AND MOVE THE DOOR SLIGHTLY CLEARING THE OPERATOR FROM THE NOTCH. GRASP BOTH SIDES OF THE DOOR LIFTING UP HIGHER. TILT THE DOOR BOTTOM OUT OF THE BOTTOM TRACK, LOWER DOOR AND AWAY GENTLY TO ALLOWING THE RETURN SPRING TO CLOSE.

REPEAT THE INSIDE DOOR WITH THE SAME PROCEDURE.

SLIDING DOOR REINSTALL

FIRST INSTALL THE DOOR MARKED INSIDE, GRASP FIRMLY ON BOTH SIDES LIFTING THE DOOR NOTCH INTO THE DOOR RETURN SPRING OPERATOR AT THE TOP TRACK AND LIFT UPWARDS UNTIL THE DOOR STOPS AND SET THE BOTTOM OF THE DOOR INTO THE BOTTOM TRACK. REPEAT PROCEDURE FOR THE OUTSIDE DOOR.

SHELF INSTALLATION

ATLAS DISPLAY CASES COME STANDARD WITH TWO COATED WIRE SHELVES THAT ARE ADJUSTABLE IN 1/2" INCREMENTS.

*ACCESSORY SHELVING MAY BE PROVIDED UPON REQUEST BRINGING THE TOTAL LIMIT TO THREE SHELVES.

CAUTION - MAXIMUM WEIGHT LIMIT PER SHELF AND S/S BOTTOM IS 75 POUNDS EACH. OVERLOADING CAN DAMAGE EQUIPMENT AND CAUSE BODILY INJURY.



IMPORTANT OPERATION INFORMATION



* DISPLAY CASE REQUIRE 3" PRODUCT CLEARANCE BELOW THE FAN HOUSING AIR INLET SCREENS TO INSURE PROPER DISPLAY TEMPERATURES.

* INTENDED FOR CUSTOMER SERVICE IN A ROOM AMBIENT NOT TO EXCEED 75 DEGREES FAHRENHEIT.

* DISPLAY CASE INTENDED FOR PREPACKED PRODUCTS ONLY

****DISPLAY CASES NOT RECOMEMENDED TO RUN 24/7. DOING SO MAY AFFECT PERFORMANCE AT CUSTOMER RESPONSIBILITY.****


PRESSURE CONTROL SETTINGS

LOW PRESSURE CUT IN AT 30 PSI.

LOW PRESSURE CUT OUT AT 15 PSI.

DIFFERENTIAL SETTING OF 15 PSI.

DIFFERENTIAL CUT-IN

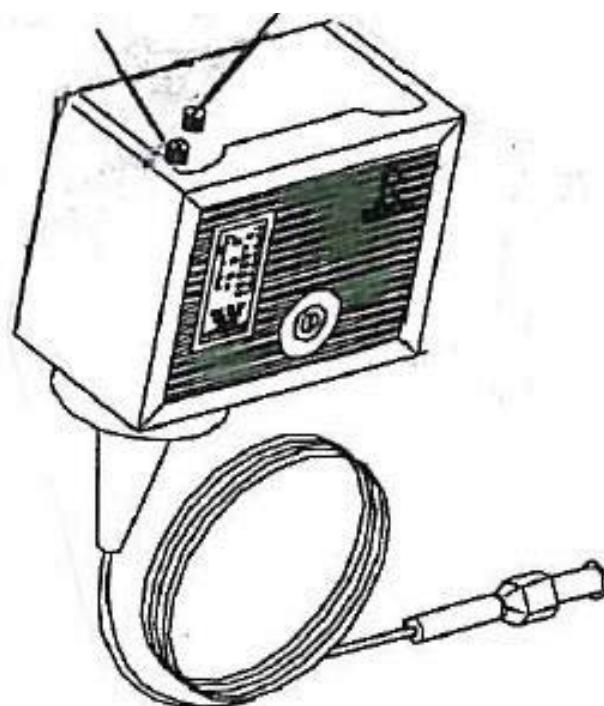



ATLAS METAL


Subsidiary of Mercury Aircraft, Inc.

1135 N.W. 159th DR., MIAMI, FL 33169


PHONE (305) 625-2451, (800) 762-7565, FAX (305) 623-0475, E-mail: sales@atlasfoodserv.com

COLD UNITS-REMOTE INSTALLATION

Cut-Out dimensions

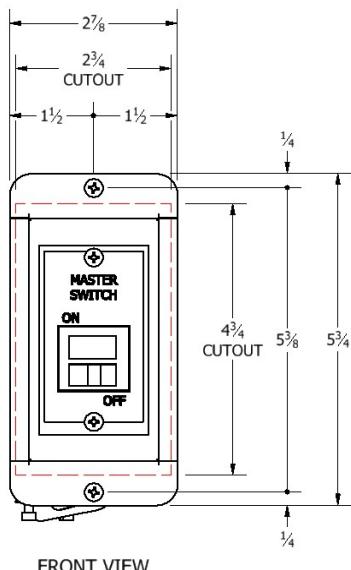

FRONT VIEW

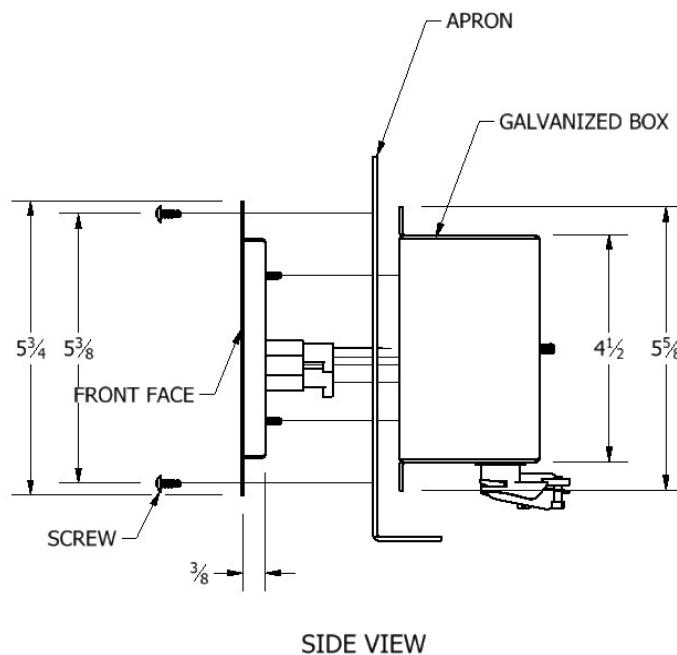


SIDE VIEW

INSTALLATION OF THE REMOTE CONTROL COLD UNITS


Provide the correct Cut-Out opening for the remote control panel (picture above).

Remove control box from the bottom of the unit.


- 1) Remove screws from front of control panel.
- 2) Place control panel inside of the box.
- 3) Mount the galvanized box behind the apron.
- 4) Mount S/S front plate to the Cut-Out in apron.
- 5) Add the screws to the front panel.

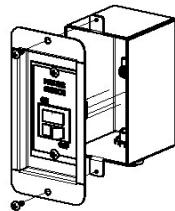


STEP-1 VIEW

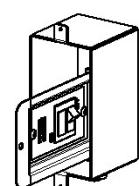


STEP-2 VIEW

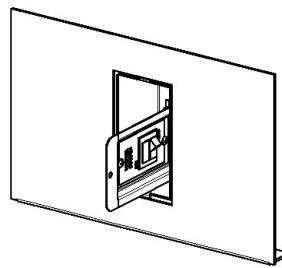

STEP-3 VIEW

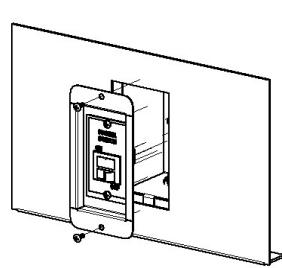


STEP-4 VIEW

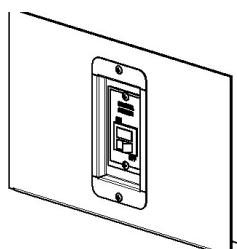

STEP-5 VIEW

The unit is ready to be connected to the electrical receptacle. Refer to the data plate on the control panel for the amperage and voltage information. Use a licensed electrician when installing power source.

PARTS LIST REFRIGERATED PASS THROUGH DISPLAY CASE WCPT SERIES

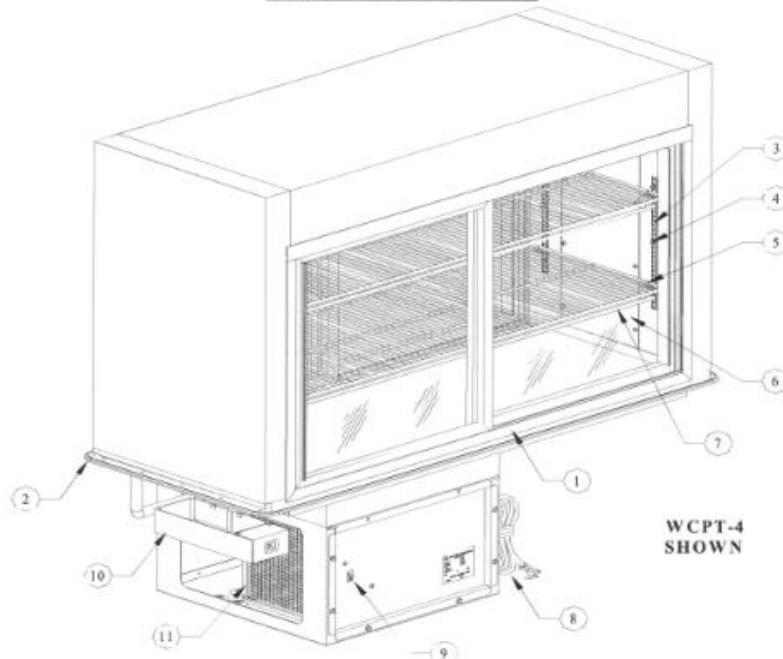

Item Number	Part Number	Description
1	27-15	Door Set#3
	27-20	Door Set#4
2	7002-0 + Model #	Vinyl Bead Gasket
3	6151-5	Plaster
4	6151-2	Thumbscrew
5	6151-1	Snap-In Shelf Supports
6	S83316-000	Plexiglass Light Cover (w hite)
7	S83332-003	Wire Shelf #3
	S83332-004	Wire Shelf #4
8	1003-0	Power Cord
9	1069-1	Compressor Switch
10	2060-1	Condensing Water Evaporator
11	2029.8M7	1/2 H.P. Compressor
12	2013	Fan Motor (Not Show n)
13	S81441-0	Fan Guard (Not Show n)
14	2014-5	Fan Blade (Not Show n)
15	600010	Expansion Valve (Not Show n)
16	2119	Evaporator Coil#3 (Not Show n)
		Evaporator Coil#4 (Not Show n)
17	113-10	Thermometer (Not Show n)
18	7019.-2	Bulb Holder (Not Show n)

Item Number	Part Number	Description
19	74-158	Light Switch
20	1034-1	Ballast (Not show n)
21	60-6056	Door Lock (Optional)
22	27-108	Mirror Door #3 (Optional)
23	27-107	Mirror Door #4 (Optional)
24	27-123	Door Spring#3 (Not Show n)
	27-122	Door Spring#4 (Not Show n)
25	22-2040	Low Pressure Control (Not Show n)
26	S83317-000	Bracket (Not Show n)
27	2024	Drier (Not Show n)
28	680-63	Door Roler
29	1149	Fan Motor Wire Harness
30	49-504	Pop Rivet
31	41-33	Screws
32	27-85	Black Tape
33	1800-503	Head Screw
34	1800-504	Truss Head Screw
35	0721-1101	Flast Head Screw
36	74-158	Rocket Switch
37	71-A	Evaporator Bracket
38	S83317-000	Pressure Switch Bracket



ATLAS METAL


Subsidiary of Mercury Aircraft, Inc.

1135 N.W. 159th DR., MIAMI, FL 33169

PHONE (305) 625-2451, (800) 762-7565, FAX (305) 623-0475, E-mail: sales@atlasfoodserv.com

Refrigerated Drop-In Trouble Shooting Guide

Symptom	Probable Cause
Unit will not run	Unit not plugged in. No power at receptacle. Thermostat and or switch not in the on position. Unit may be in a defrost cycle (if supplied) wait approximately 20 min. Call factory for service at 1-800-762-7565
Condenser runs but short cycles	Condenser coil dirty Inadequate ventilation. Call factory for service at 1-800-762-7565
Condenser runs constantly.	Condenser coil dirty. Inadequate ventilation. Unit installed in a hot location Call factory for service at 1-800-762-7565 NOTE: WF series runs constantly.
Food product not cold enough.	Food product must be chilled to 33-35 deg. when placed in unit. Air movement over food product. Food product not being stirred or rotated. Call factory for service at 1-800-762-7565

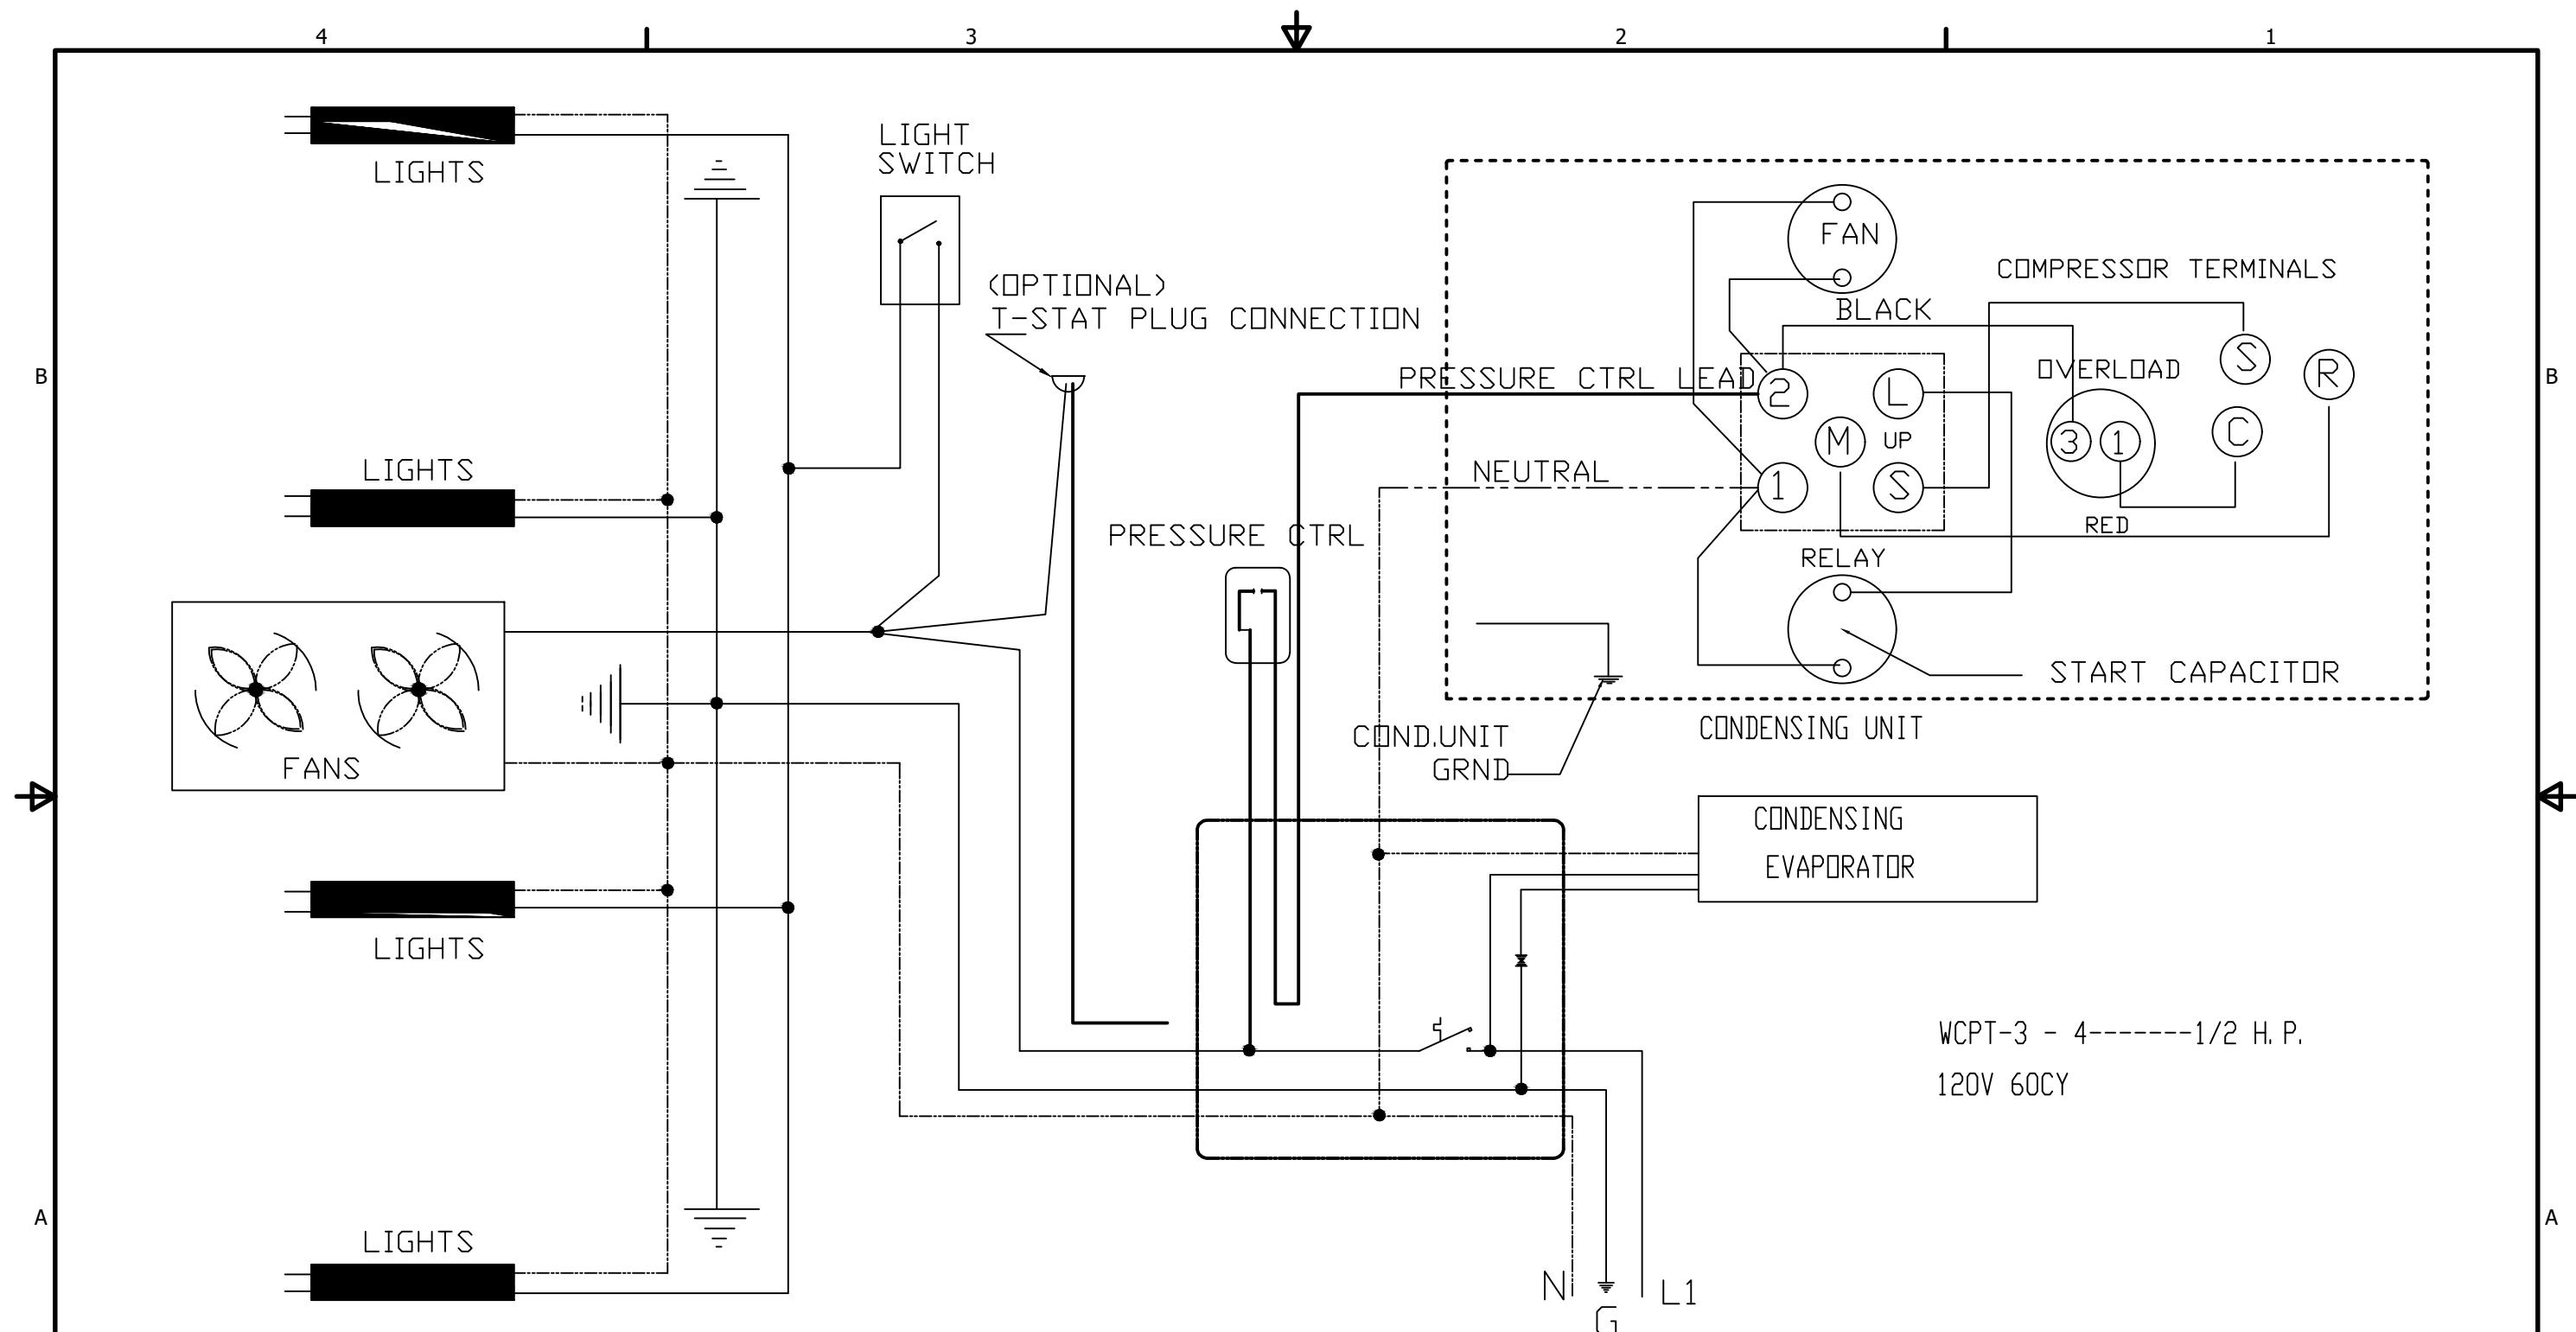


REVISION HISTORY		
REV	DESCRIPTION	DATE
1	ON CAD	09-04-08
2	LED LIGHT	05.23.23
3		
4		
5		

*These plans are the exclusive property
of Atlas Metal Industries Inc. Any unauthorized
use without written consent of Atlas
Metal Industries Inc., is strictly prohibited.*



1135 NW 159TH DRIVE MIAMI, FLORIDA 3316

DATE: 09.04.08	SIZE: B	CUSTOMER: WCPT-ELECTRICAL SCHEMATIC		
DRAWN BY: MHA		REFERENCE:	WCPT-3-4 ELECT.SCHEMATIC	
CHECKED BY: NS		P.O. #: -----	DRAWING No. -----	SCALE: 3/4" = 1'-0"
		JOB #: -----	-----	SHEET No. 1 OF 1

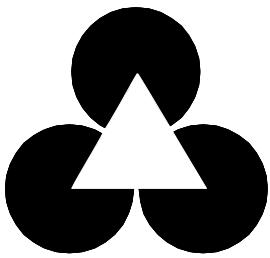

**Atlas Metal
INDUSTRIES, INC.**


LIMITED WARRANTY

Atlas Metal Industries, Inc. warrants to the Purchaser of this product that the same shall be free from defects in the workmanship and material for a period of one year from the date of original installation of the equipment, but not to exceed eighteen (18) months after date of shipment from factory. During this period of time Atlas Metal Industries, Inc. will replace all defective parts and will pay for authorized replacement labor. Replacement and installation of such parts and labor shall be provided only upon prior written authority of Atlas Metal Industries, Inc.

The Refrigeration warranty is for a twenty (20) month time period and includes supplying the compressor at a no charge basis provided the damage to the compressor was not caused by the customer or end user. Authorized replacement labor will be paid for a period of one year from date of installation. Freight costs for defective unit to and from Atlas Metal Industries, Inc. are not included, and all defective parts must be returned to the factory freight prepaid for evaluation. **ALL WARRANTY LABOR MUST BE AUTHORIZED BY ATLAS METAL INDUSTRIES, INC. PRIOR TO THE ACTUAL WORK BEING DONE.** This warranty does not apply to any equipment or any part thereof, which has been subjected to shipping damage, improper voltage, alteration, abuse or misuses, and does not cover loss of food, other products, or damage to property due to mechanical or electrical malfunction.

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION OF THE FACE HEREOF. SELLER DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OF THE GOODS OR THE FITNESS OF THE GOODS FOR ANY PURPOSE AND BUYER AGREES THAT THE GOODS ARE SOLD "AS IS."

THIRD PARTY EQUIPMENT : THIRD PARTY EQUIPMENT IS COVERED THROUGH THE LIMITED WARRANTY DESIGNATED BY THE ORIGINAL EQUIPMENT MANUFACTURER (OEM). WARRANTY COVERAGE AND/OR PARTS & LABOR MAY BE LIMITED TO THE EXTENT OF STATED LIMITED WARRANTY. SUBJECT TO ATLAS METAL DISCRETION.

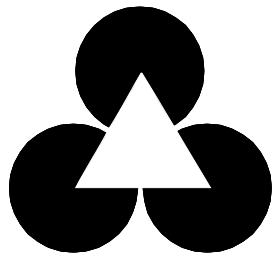

**Atlas Metal
INDUSTRIES, INC.**

WARRANTY INFORMATION


In order to have your invoice approved for payment by the factory, please note the following:

An authorization number must be obtained from the factory prior to performing any warranty service.

Atlas Metal will not approve excessive labor due to poor access to the unit being serviced. If design does not allow reasonable access, contact the factory.

All travel time that exceeds 100 miles round trip must be authorized by the factory.

**Thank You:
Warranty service Dept.**

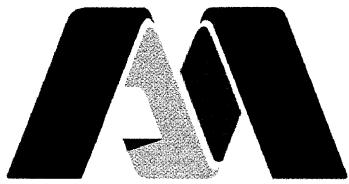

ATLAS METAL

FOR UNITS LESS A COMPRESSOR

The warranty for units less a compressor cover defects in workmanship. It covers service for said defects.

Because of the wide variety of refrigerants, install variables, and location differences, service for units less a compressor does not include installation, or defects resulting from installation.

Atlas is not responsible for customer hook up, installation, refrigeration variances, refrigeration performance, and other issues related to the installation and/or hook up of the sites refrigeration system to the unit less compressor.

Atlas is proud to continue to offer technical phone support free of charge, as well as help coordinate service calls. All service calls, authorizations, and charges must be assumed by the requestor.

Before purchasing a unit less compressor, be sure to have communicated all technical aspects of the details to the Atlas sales team. This includes but not limited to refrigerants, electrical conditions, and dimensions of installation.